



Kentronics®
1467 Bribe Island Road
Ningi, Qld, 4511

ABN: 36 106 545 950

Ph: 07 5429 5363

Fax: 07 5429 5364

Mobile: 0417 377 480

Email: kenton@kentronics.com.au

Date 16/11/2010

Setup Procedure - Gilbarco T24 to ECR/POS

Firstly finalize all sales & cancel all pre-authorization of bowsers – No RED LED's on or flashing!!!

- 1 Remove Key
- 2 Insert "BLUE" Key – Observe "MASTER" Flashing
- 3 Press ENTER Key – Observe "Enter MASTER Code"
- 4 Enter "5 & 0" (50) & then press ENTER Key
- 5 Right Arrow across to "POS/ECR" & then press ENTER Key
- 6 Right Arrow across to "CONNECTED" & then press ENTER Key
- 7 Remove BLUE Key & Insert your usual running Key (GREEN or OPERATOR Key)
- 8 Enter Operator Code "1" for Normal Operation.

You should now find that you have enabled the POS/ECR feature within the T24 Console.