

Date 09/03/2011


Vision Software / Processor Checklist LPG Only

Locate & identify R45 on Vision Processor – Bottom Left Hand Corner near J4 connector.

If R45 = 88.2R install Vision EPROM Version B4.5.7dzp

If R45 = 95.5R install Vision EPROM Version B4.5.71dzp

If the incorrect EPROM is installed your RTD temperature will be out by 10 deg. C.

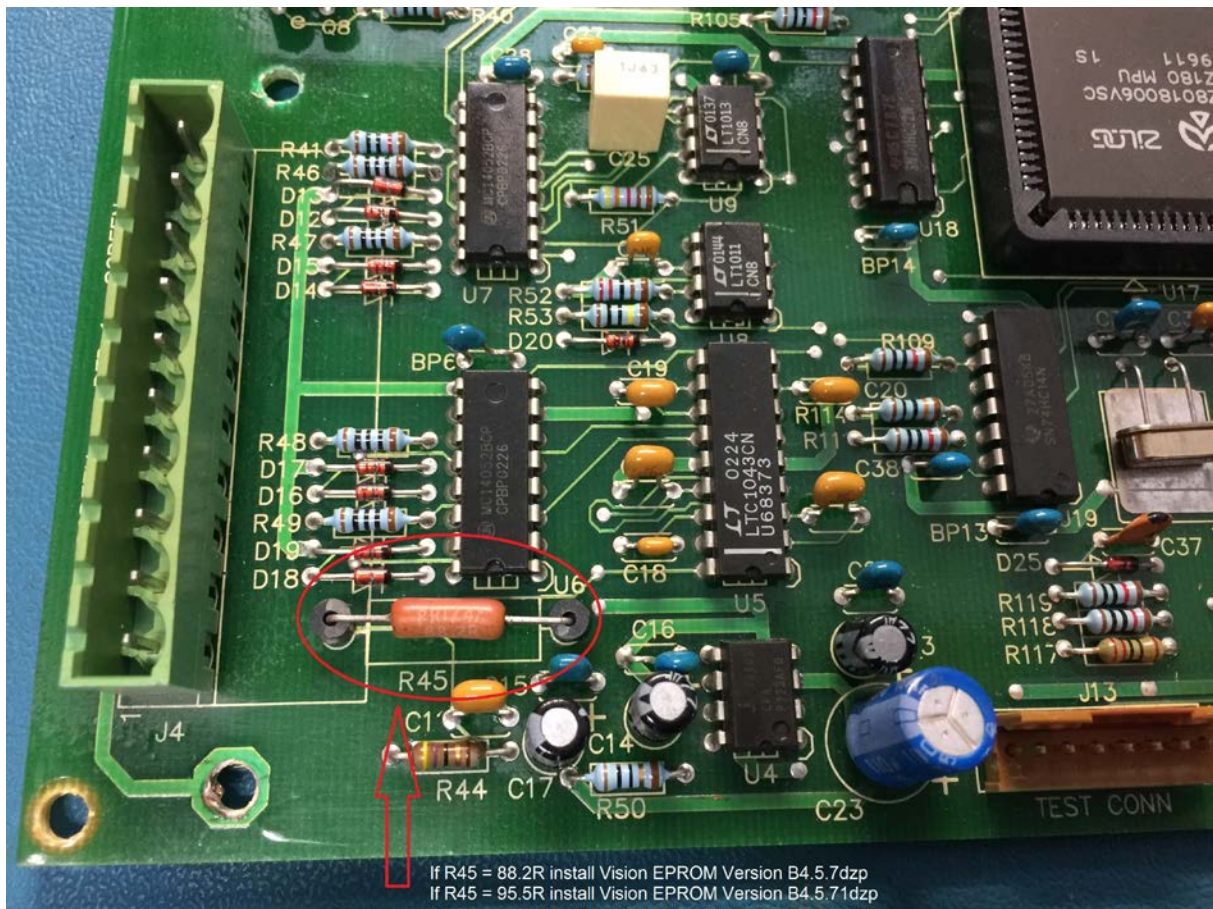

If R45 = 88.2R install Vision EPROM Version B4.5.7dzp
If R45 = 95.5R install Vision EPROM Version B4.5.71dzp